



BELASTNINGSTABEL

for soldater (elementstøtter)

Længde (m)	38SO300L (kN)	38SO300 38SO300G (kN)	38SO400 38SO400G (kN)	38SOSKRÅ 38SOSKRÅG (kN)		
				TRYK vandret position	TRYK 45 position	TRÆK 45 position
1,8	18,00	30,00				
1,9	18,00	30,00				
2,0	18,00	30,00				
2,1	16,90	27,21		21,21	30,00	30,00
2,2	15,50	24,79		21,21	30,00	30,00
2,3	14,10	22,88	30,00	20,45	28,93	30,00
2,4	12,80	20,83	27,76	18,71	26,47	30,00
2,5	11,60	19,20	25,60	17,19	24,31	30,00
2,6	10,60	17,75	23,67	15,84	22,40	30,00
2,7	9,60	16,46	21,55	14,97	21,18	30,00
2,8	8,80	15,31	20,41	14,48	20,49	30,00
2,9	7,90	14,27	18,02	13,93	19,71	30,00
3,0	7,25	13,33	17,78	13,38	18,92	30,00
3,1			16,65	12,83	18,14	30,00
3,2			15,83	12,20	17,25	30,00
3,3			14,68	11,51	16,27	30,00
3,4			13,84	10,88	15,33	30,00
3,5			13,06	10,12	14,31	30,00
3,6			12,35	9,36	13,24	30,00
3,7			11,69			
3,8			11,08			
3,9			10,52			
4,0			10,00			