


Fix LED clipslampe Sort 4W

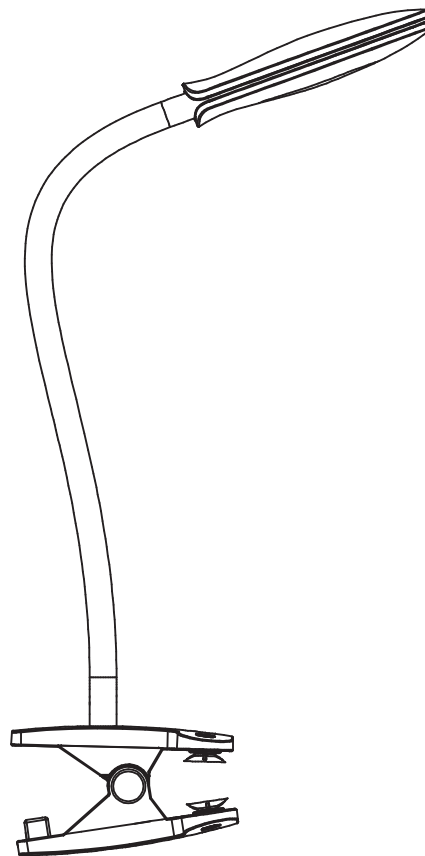

Model: Fix LED clipslampe Sort 4W
Wattage: 4W; Lamp type: LED
Supply: DC 13.2V 0.28A; P.O.: K-4032

If the outside cord is damaged or broken, it should be changed/ repaired by the manufacturer or a qualified electrician.

Hvis kablet på lampen er brudt eller beskadiget, skal det udskiftes af producenten eller en aut. el-installatør.

Step 1: Make sure power is OFF on the outlet, before beginning the installation.

Step 2: Follow the instruction sketch above.

Step 3: Plug adapter into outlet and now the lamp is ready for use.

Trin 1: Vær sikker på at kontakten på væggen er slukket, således at der ikke er strøm på lampeudtaget/ stikkontakten.

Trin 2: Følg instruktionstegningen nøje ved samling af lampen.

Trin 3: Gennemgå instruktionstegningen inden strømmen tændes.

Se vores øvrige sortiment på www.halodesign.dk



220-240V LED 4W



Importer :Halo Design, Gammelgårdsvej 85, DK-3520 Farum
Halodesign.dk