



1881 INSTALLATION GUIDE

Size: 1780mm × 800mm × 560mm

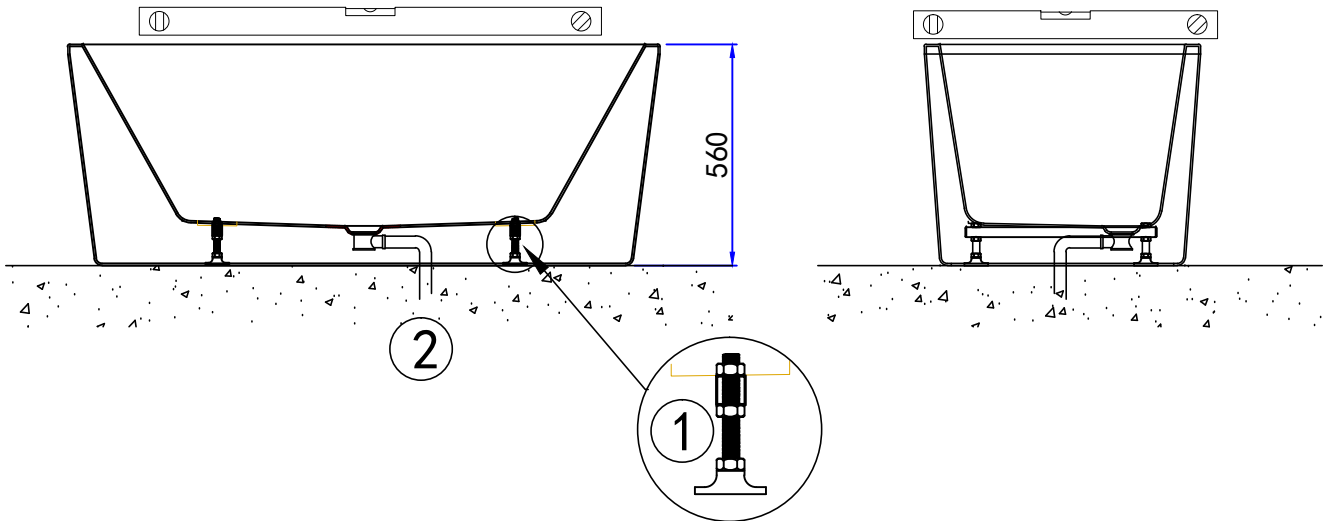


1、 Adjust the feet to be level

2、 Put the bath waste into floor drainage

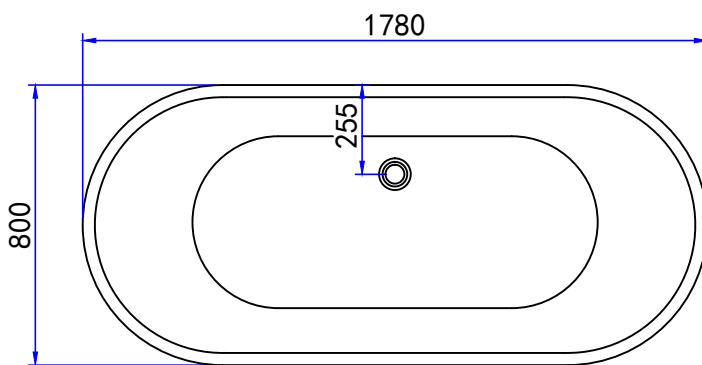

Top-View

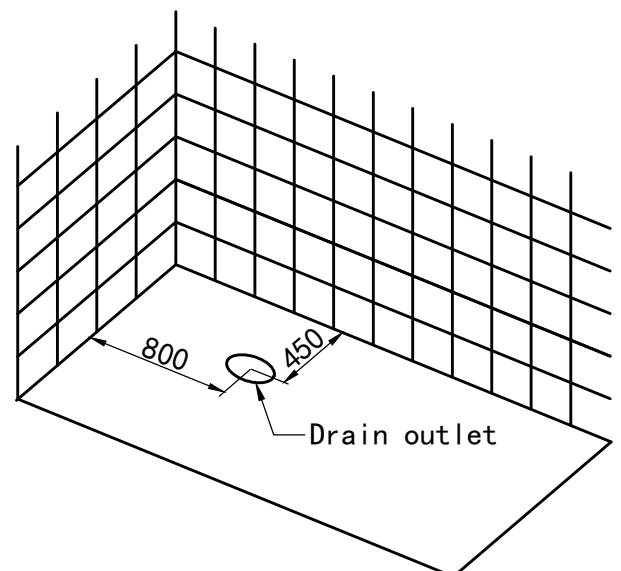

Floor layout