
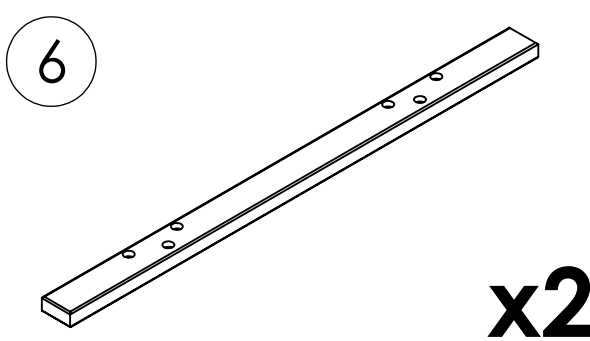
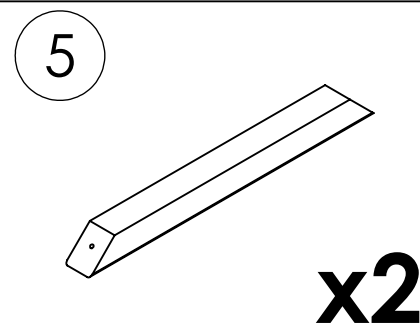
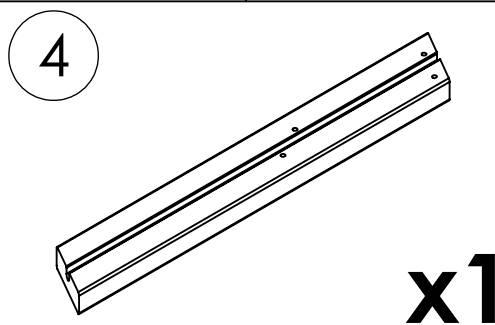
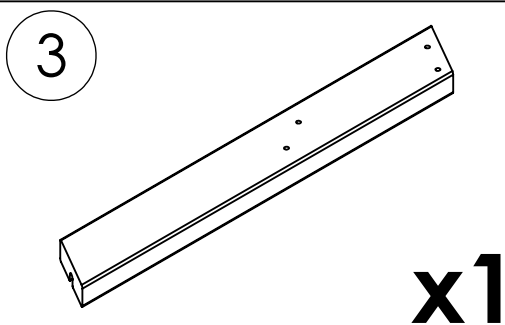
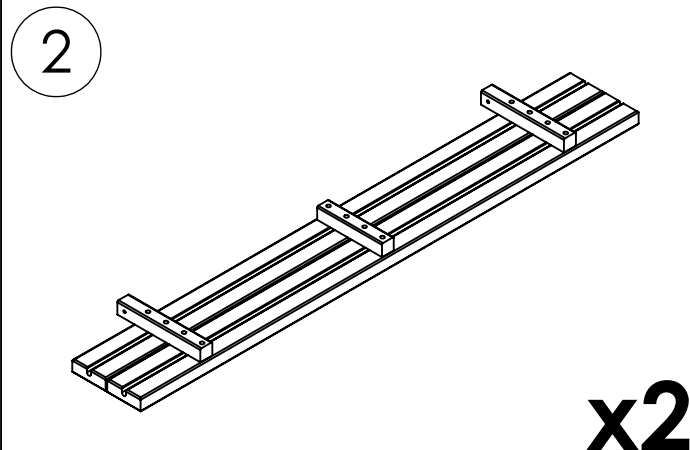
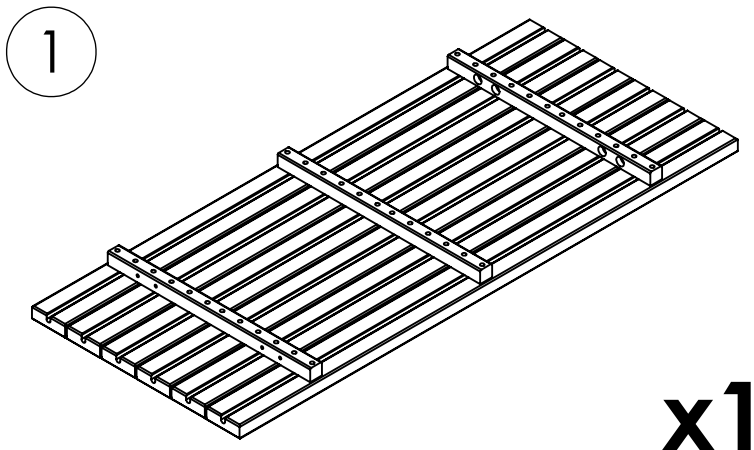


PLUS A/S
Ådalen 13B
DK-6600 Vejen
phone: +45 7996 3333
web: www.plus.dk

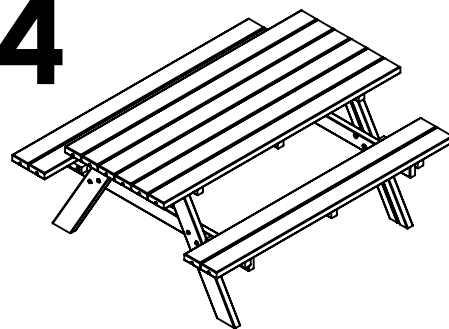



Møtrikker (D+E) strammes til når hele bænken er samlet.

Erst nach der kompletten Montage alle Schraubenmuttern (D+E) fest anziehen.


The nuts (D+E) are tightened when the hole set have been assembled.

Mutrarna (D+E) skruvas åtdragna när hela bänken är monterad.




Les écrous (D+E) sont serrés lors du montage des planches.

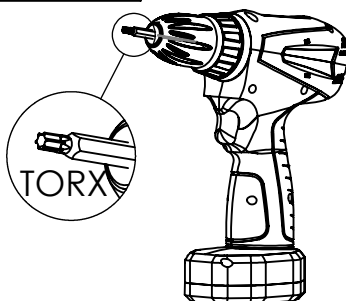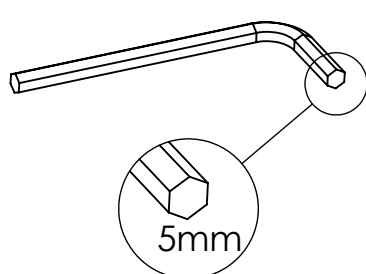

A		5x50 TX	x4
B		M8x80	x20
C		M8	x20
D		M8	x16
E		M8 lock	x4



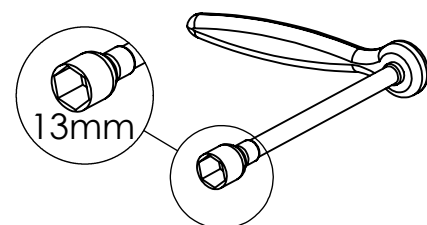


1

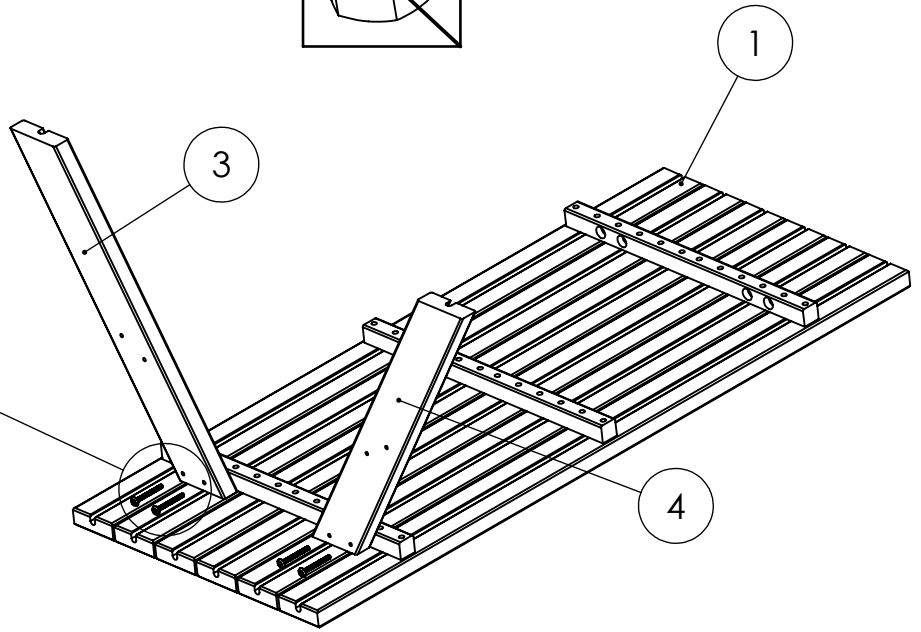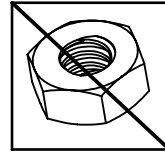
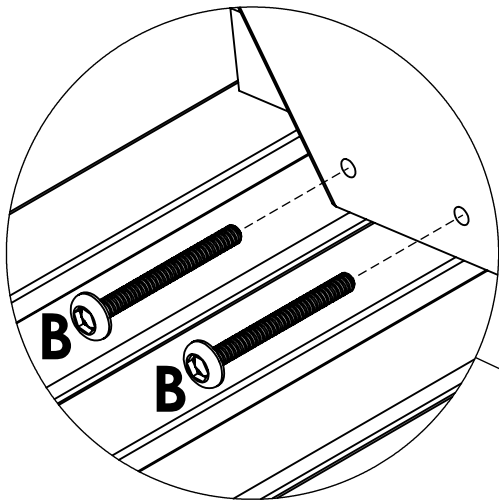


B		M8x80	x4
----------	--	--------------	-----------




2

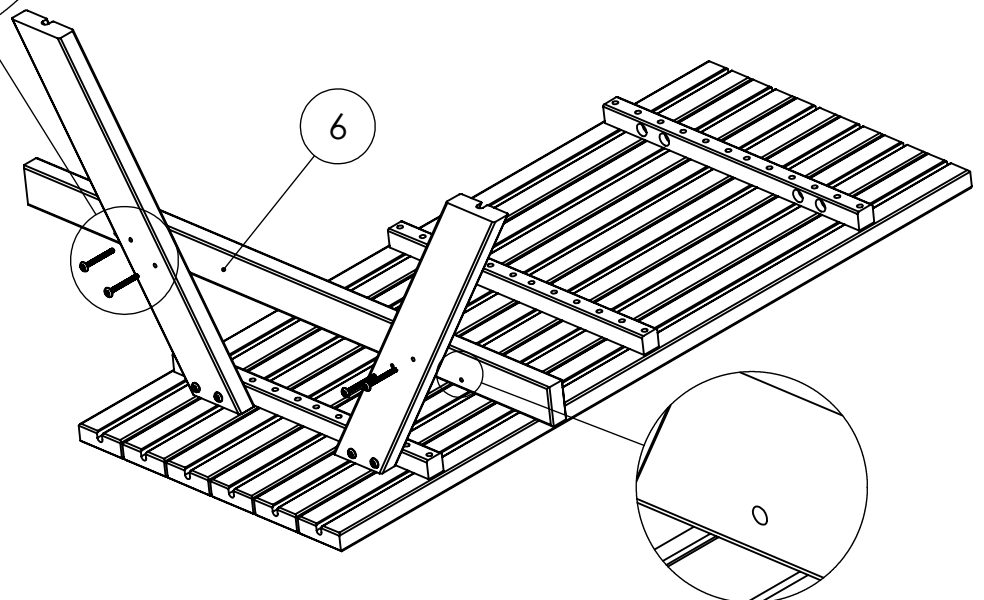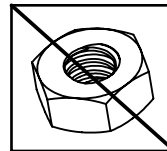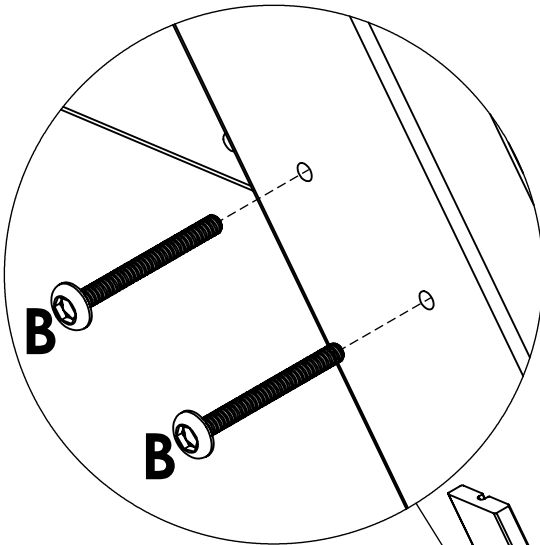




B		M8x80	x4
----------	--	--------------	-----------

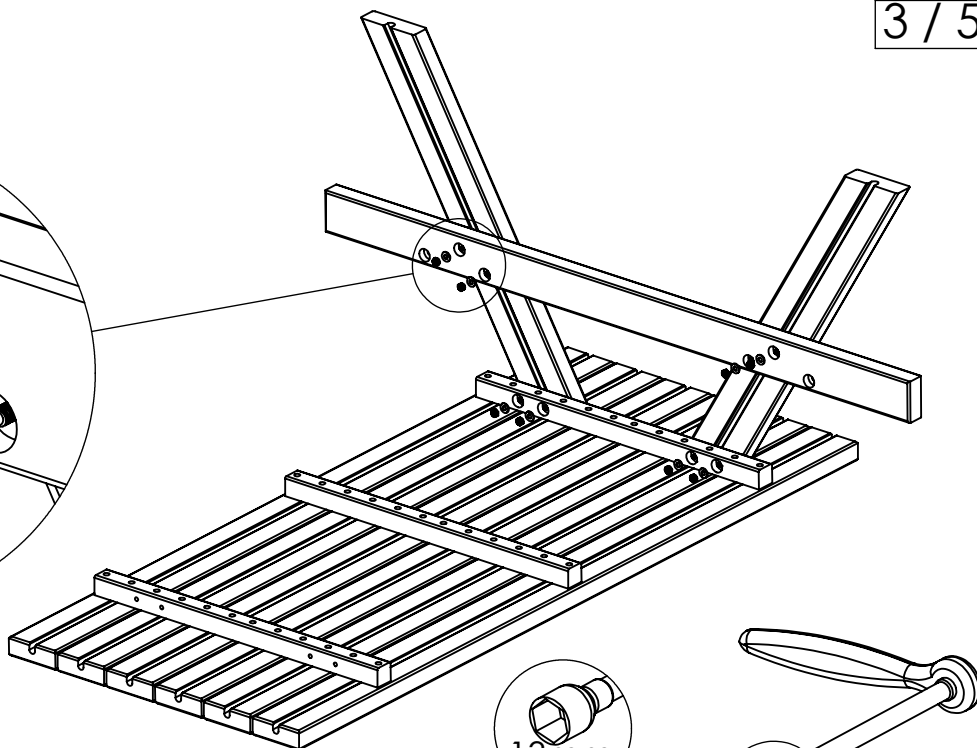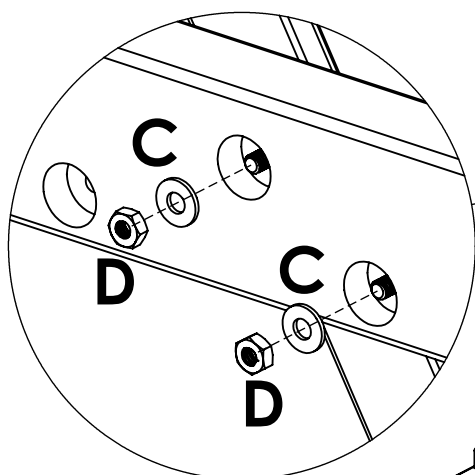





C		M8	x8
D		M8	x8

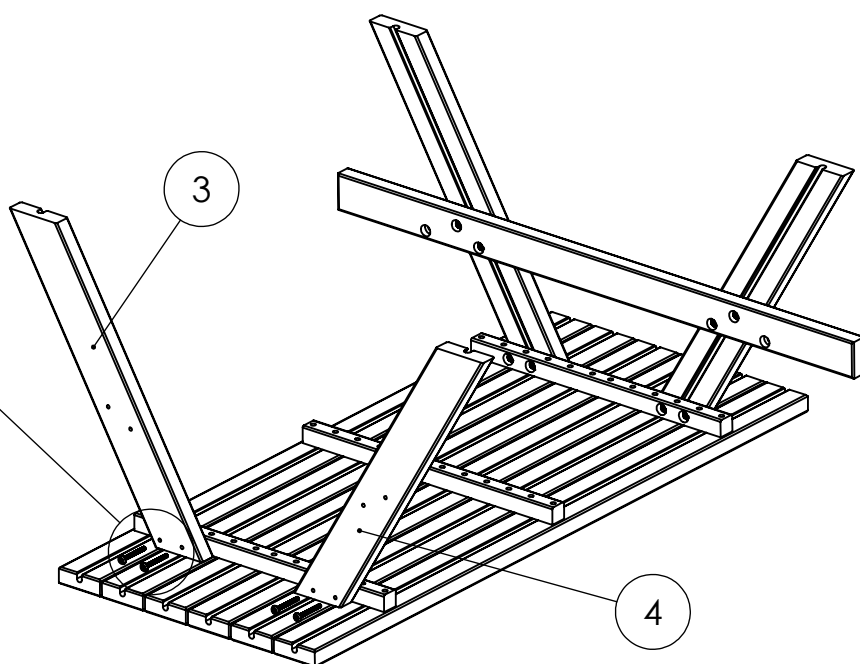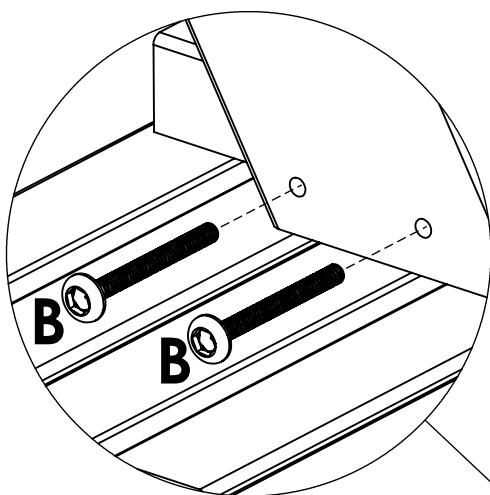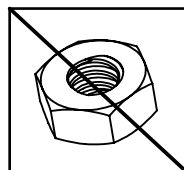

B		M8x80	x4
----------	---	--------------	-----------

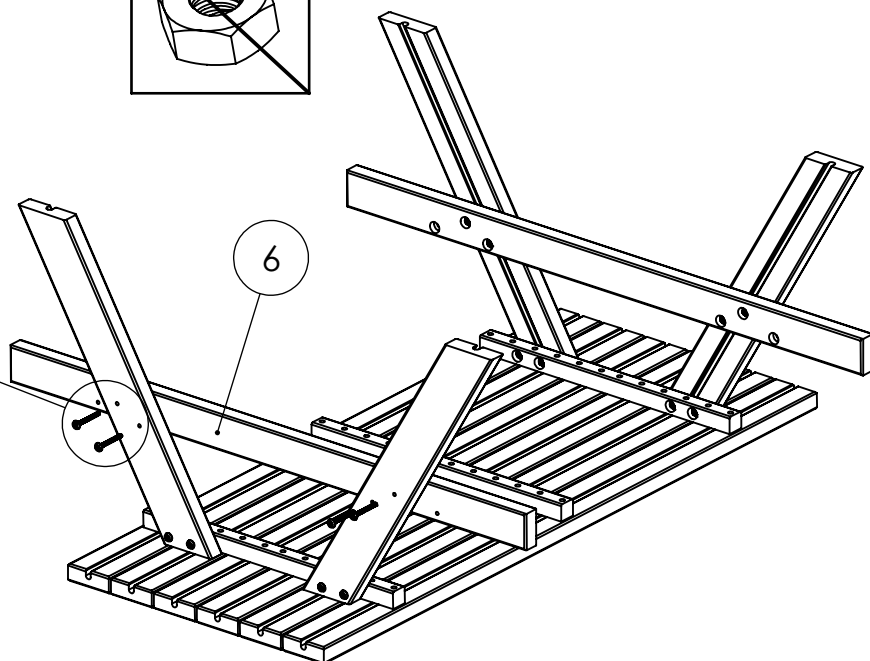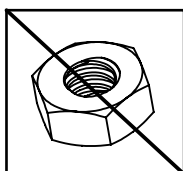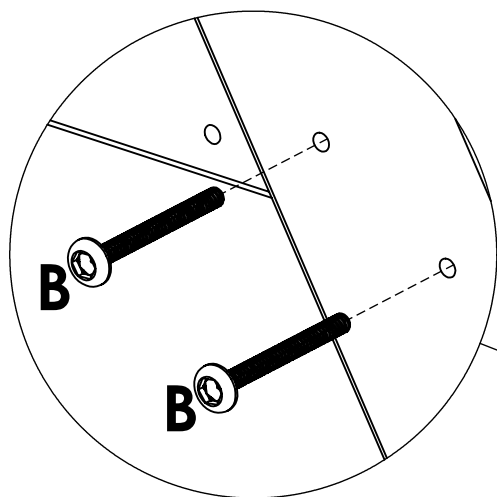




B		M8x80	x4
----------	---	--------------	-----------

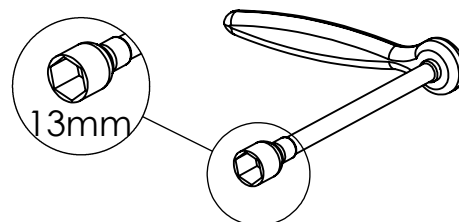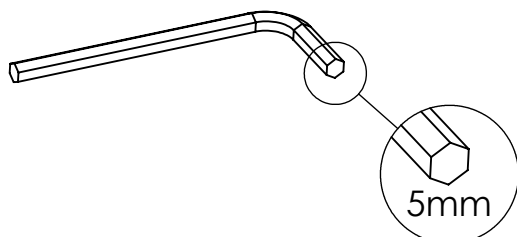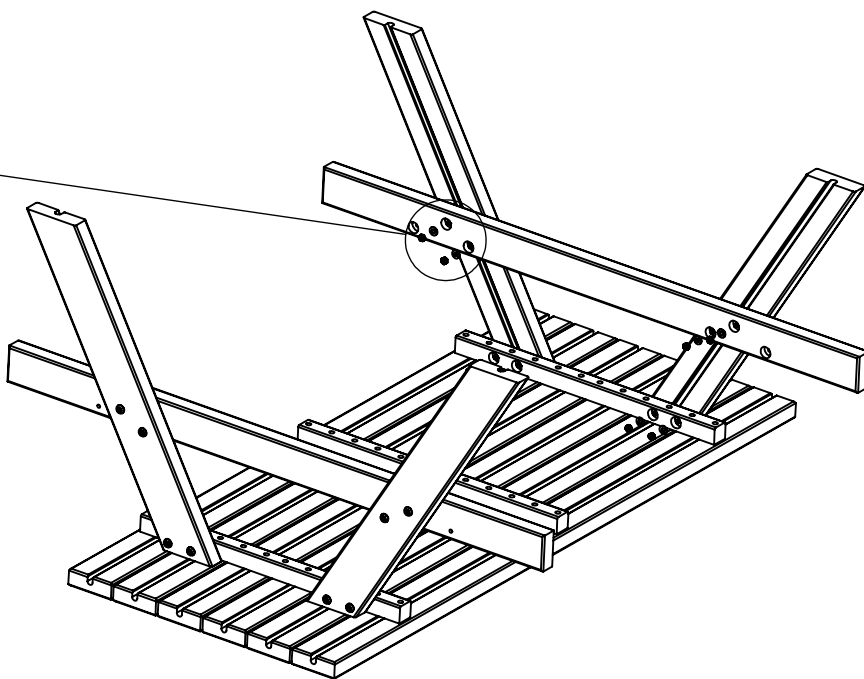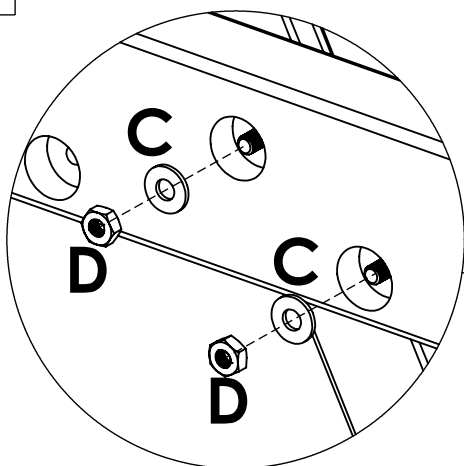


C		M8	x8
D		M8	x8

7





5 / 5

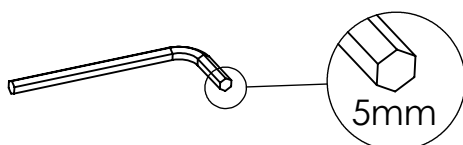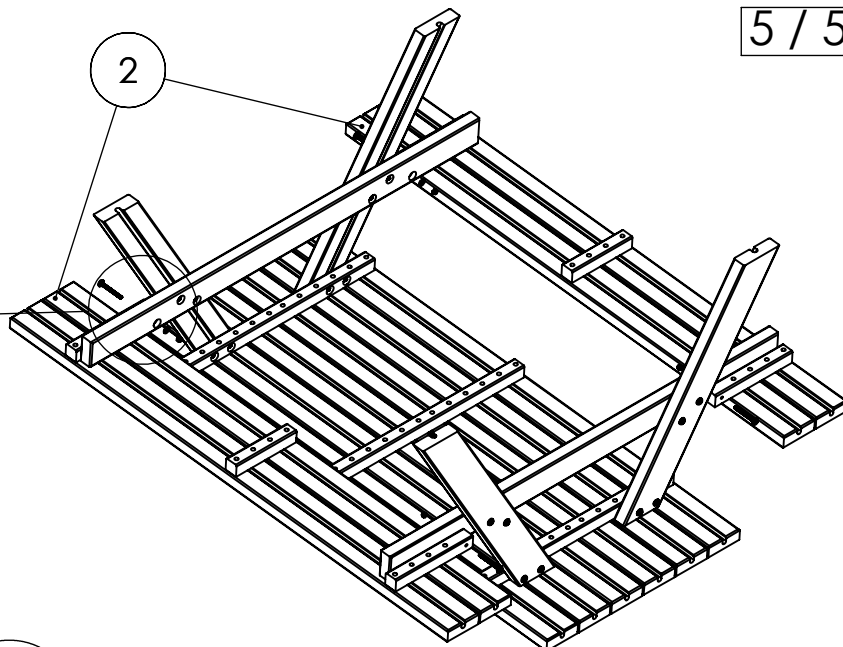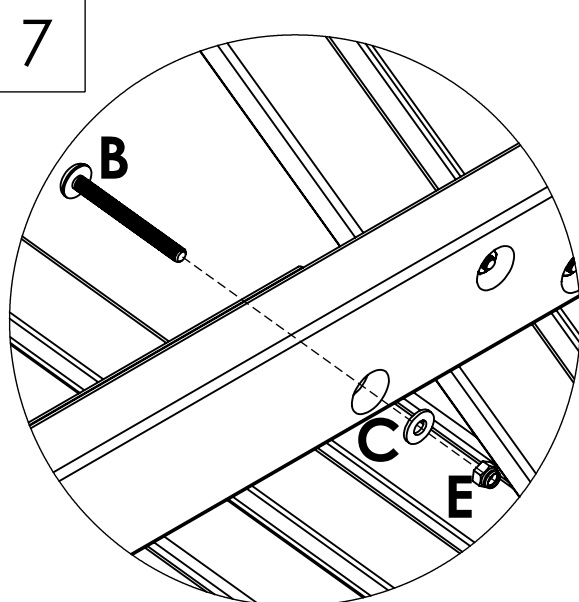

B		M8x80	x4
C		M8	x4
E		M8 lock	x4

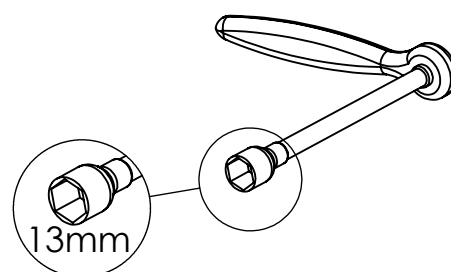

8

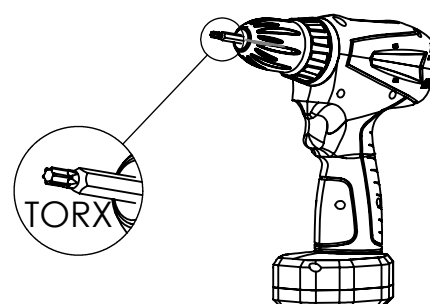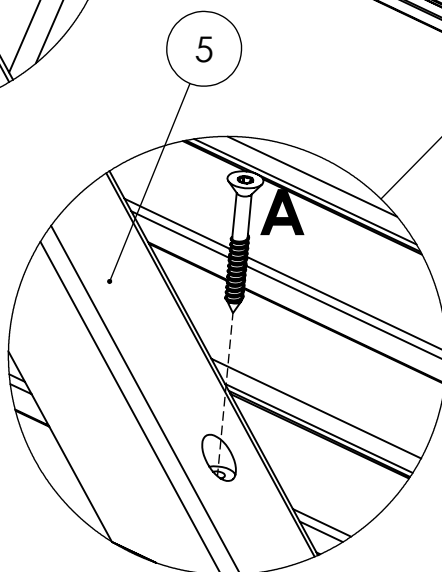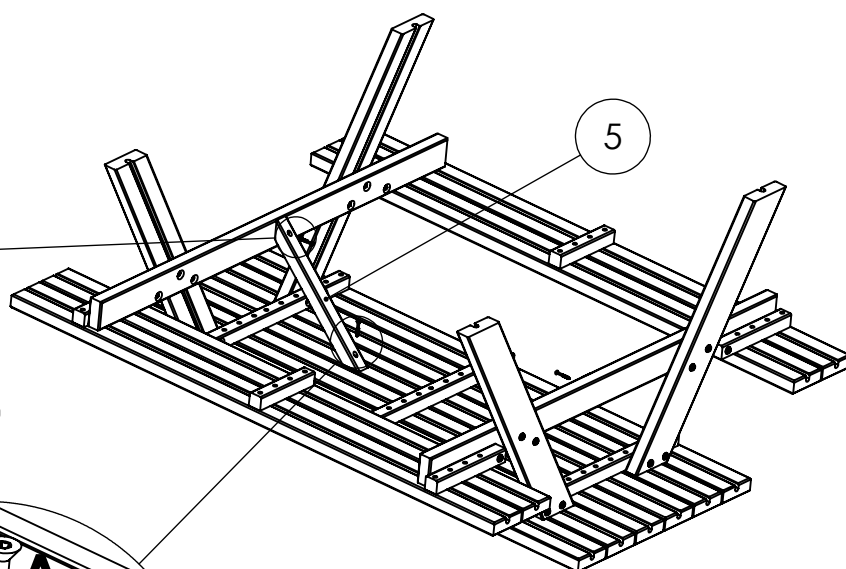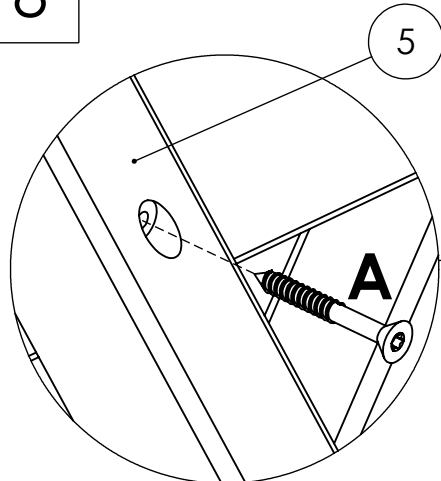

A		5x50 TX	x4
----------	---	----------------	-----------