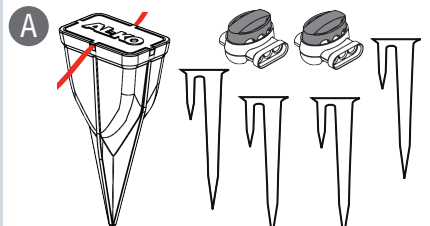
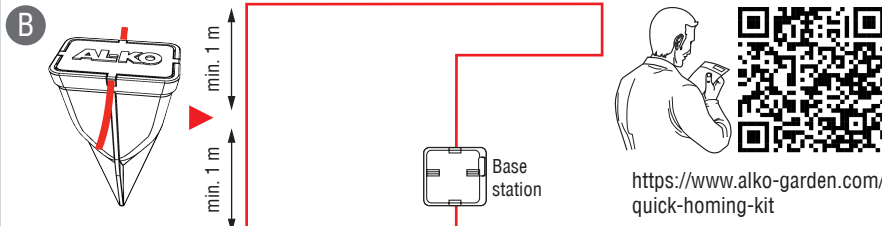


# Quick Homing Kit<sup>®</sup> – Installation

**1**

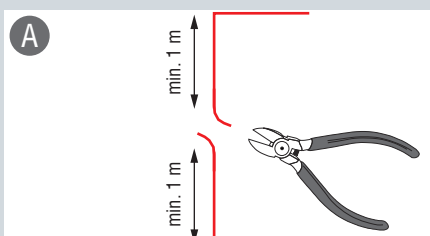
**A** 

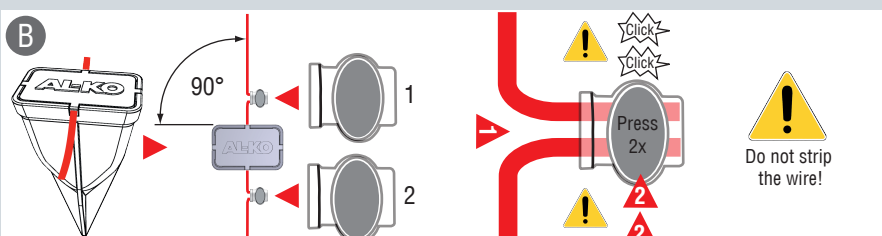
**B** 

Base station

<https://www.alko-garden.com/quick-homing-kit>

**2**

**A** 

**B** 

90°

1

2

2

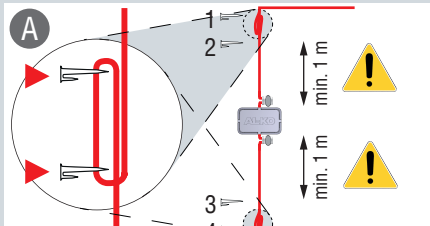
Click

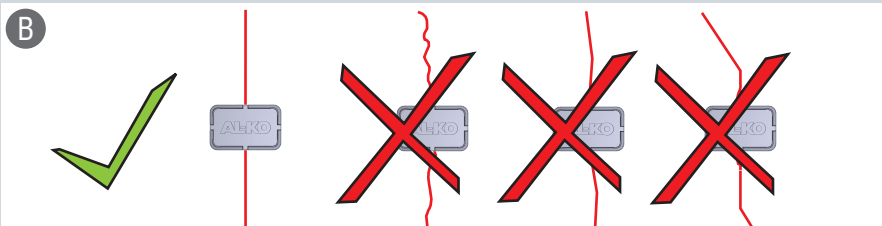
Click

Press 2x

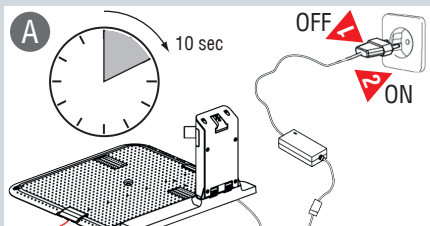
Do not strip the wire!

**3**

**A** 

**B** 

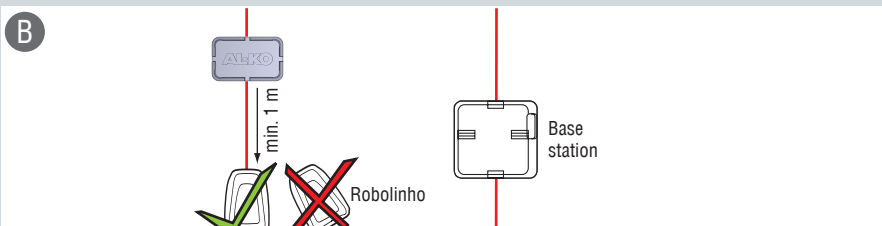
**4**

**A** 

10 sec

OFF

ON

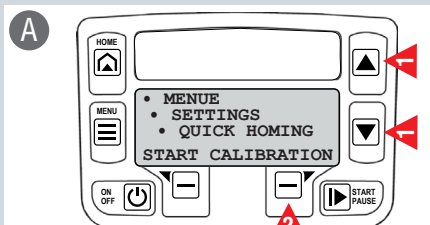
**B** 

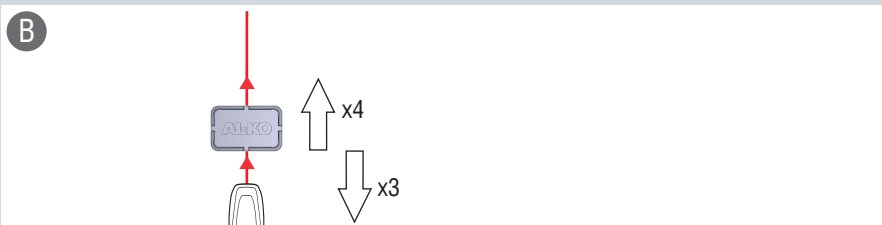
min. 1 m

Base station

Robolinho

**5**

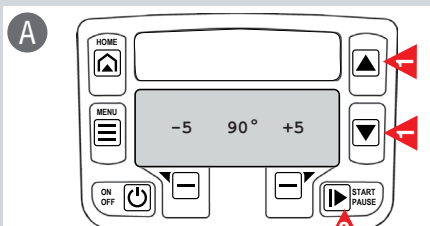
**A** 

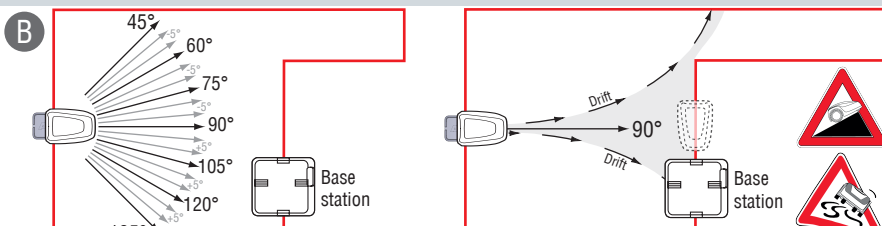
**B** 

x4

x3

**6**

**A** 

**B** 

45°

60°

75°

90°

105°

120°

135°

Base station

Base station

Drift

Drift